 


## Mats

## nVent NUHEAT Mat Floor Heating Systems Measuring Instructions

**NOTE:** Refer to the Standard Mat Guide to check if a standard mat is suitable for the room layout.

An online measuring tutorial is available at www.nvent.com/floor-heating/custom-mats/#measuring.



 
For assistance with measuring, you can speak to a designer directly by calling our NUHEAT Customer Care number at 1.800.778.WARM(9276). NUHEAT Customer Care hours are Monday-Friday 5am-5pm PST.




- 1. Pick a corner of the room and use that as the starting point for your measurements. Remember that you must return to this starting point at the end of your measurements.
- 2. Measure and draw the walls of the room on grid paper and record the measurements.




a. Each time the wall changes direction, record the measurement before continuing to measure the next wall. Measure around fixtures where NUHEAT would not be installed, such as shower bases and tubs.



 
b. Be sure to include any small dimensions, such as framing walls for entry ways into smaller rooms.




c. Measure/draw the room on grid paper and record the measurements until you reach the starting point identified in Step 1.

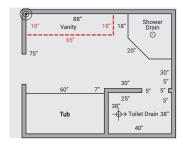

3. Measure and draw the location of cabinets and vanities.

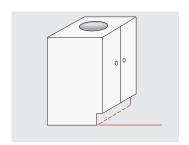


a. For cabinets and vanities, make sure to take the measurement right up to the toe-kick.

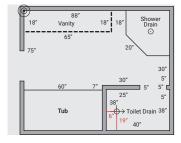


4. Measure and draw the location of floor features such as:

- a. Toilet drains
  - i. Measure from the walls to the center of the toilet drain.

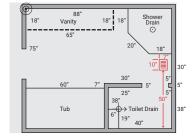

- b. Vents
- c. Other fixed floor features

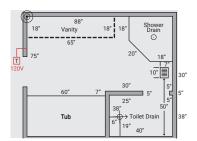

5. Indicate the thermostat location and voltage if known.

**IMPORTANT:** Measure tight for all your measurements.

DO NOT make any allowances in your measurements.

## **North America**

Tel +1.800.545.6258 Fax +1.800.527.5703 thermal.info@nvent.com

