


Wiring Diagram for nVent NUHEAT Thermostats



SIGNATURE, HOME, ELEMENT THERMOSTATS

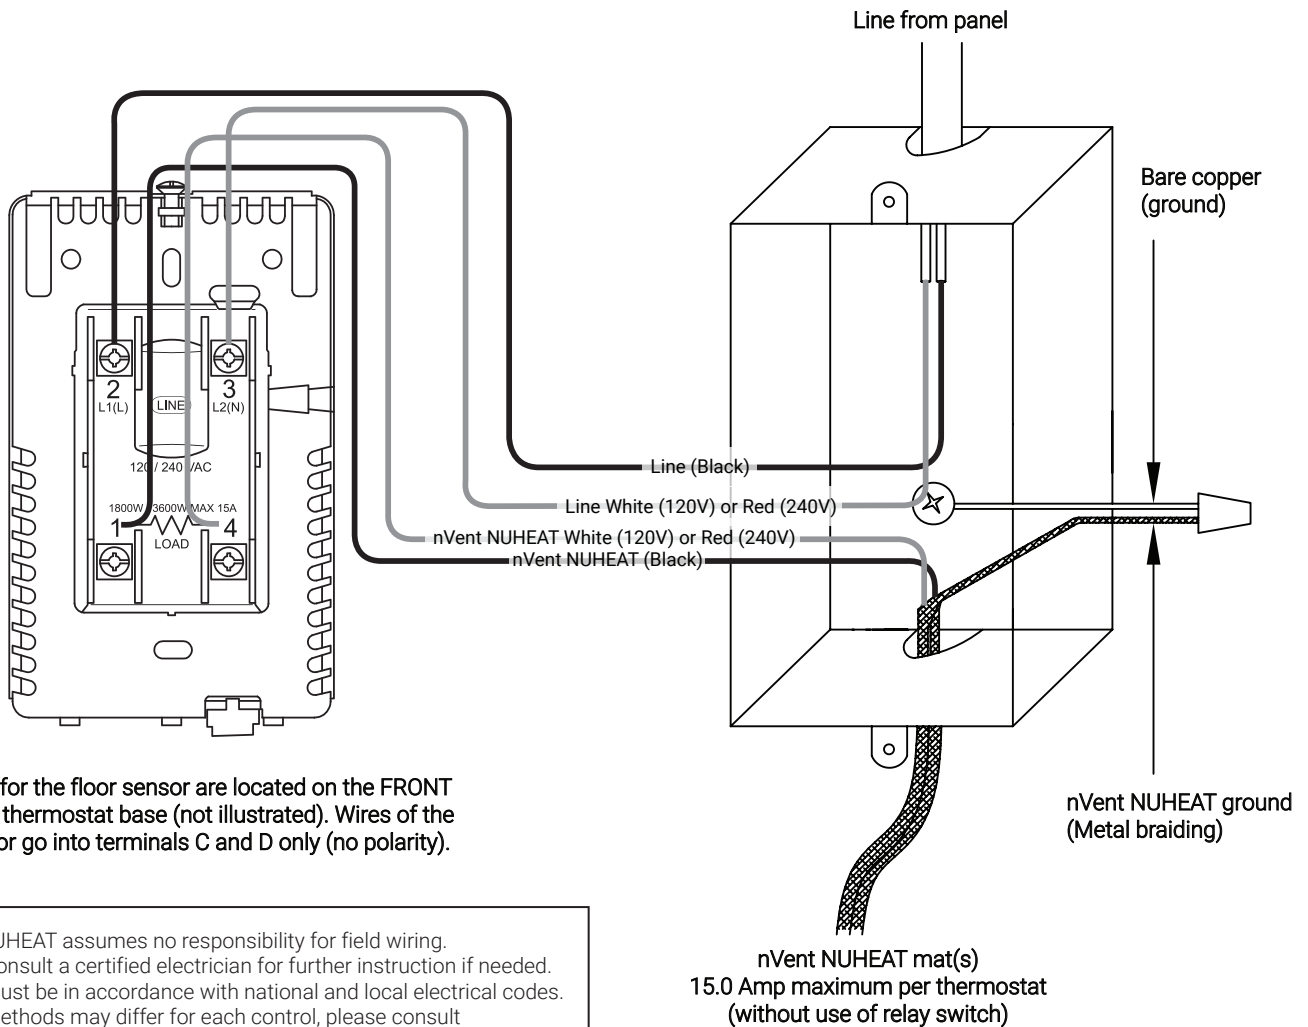

Terminals for the floor sensor are located on the FRONT side of the thermostat base (not illustrated). Wires of the floor sensor go into terminals C and D only (no polarity).

nVent NUHEAT assumes no responsibility for field wiring. Please consult a certified electrician for further instruction if needed. Wiring must be in accordance with national and local electrical codes. Wiring methods may differ for each control, please consult Manufacturer's instructions for actual specifications.

North America

Tel: 1.800.778.9276
Fax: 1.604.529.4404
res.customercare@nVent.com



Our powerful portfolio of brands:

CADDY ERICO HOFFMAN RAYCHEM SCHROFF TRACER