


Thermostat Wiring: 120V



NUHEAT

FOR SIGNATURE, HOME AND ELEMENT THERMOSTATS

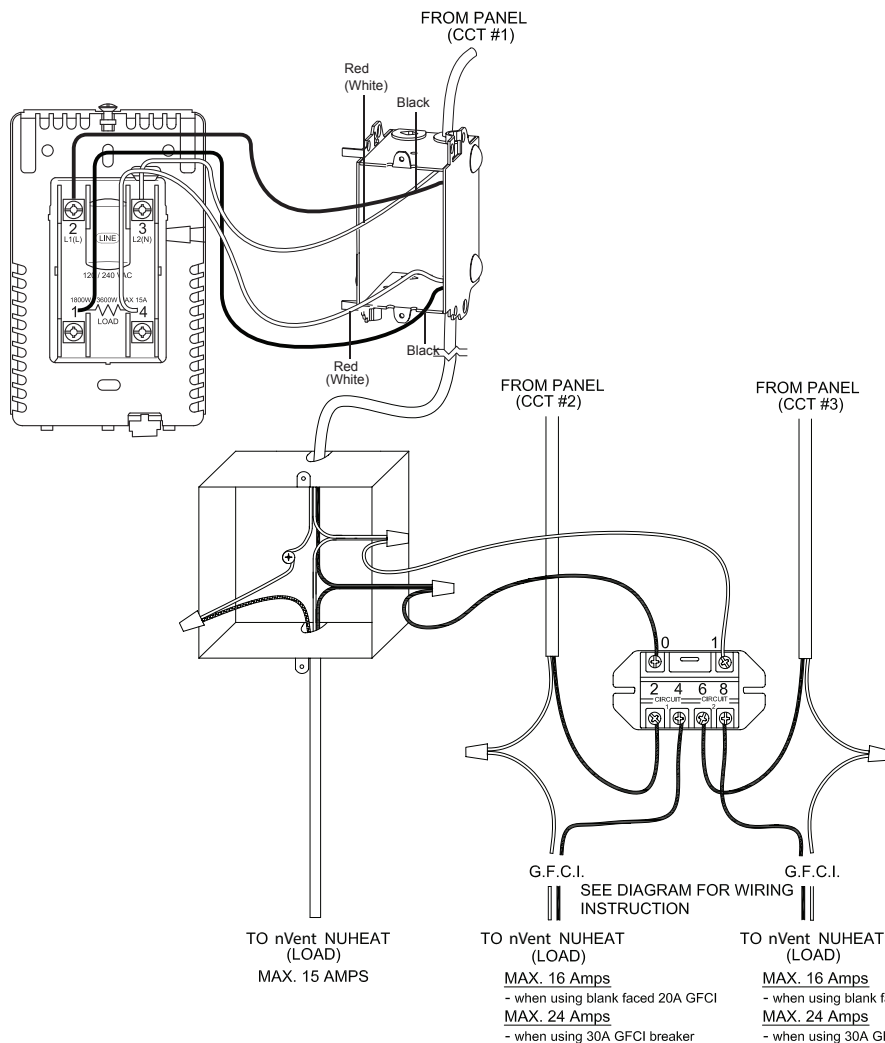

RELAY SWITCH OR CONTACTOR FOR 120V

This switch allows you to control multiple circuits with a single control. It may be conveniently located inside an electrical junction box.

NVENT NUHEAT FLOOR HEATING CONTROL WITH G.F.C.I.

See diagram for wiring instructions.

WIRING INSTRUCTIONS FOR RELAY (120V)

- 0 – Line 1 from control
 - 1 – Neutral wire from control
 - 2 – Line 1 feed from panel (CCT #2)
 - 6 – Line 2 feed from panel (CCT #3)
 - 4 – Line 1 (Black) to nVent NUHEAT
 - 8 – Line 2 (Black) to nVent NUHEAT
- Note: Do not connect neutral wires from different circuits together.

nVent NUHEAT assumes no responsibility for field wiring. Please consult a certified electrician for further instruction if needed. Wiring must be in accordance with national and local electrical codes. Wiring methods may differ for each control, please consult manufacturer's instructions for actual specifications.

North America

Tel: 1.800.778.9276
 Fax: 1.604.529.4404
 res.customercare@nVent.com



Our powerful portfolio of brands:

CADDY ERICO HOFFMAN RAYCHEM SCHROFF TRACER