


Nuheat

Thermostat Wiring: 120V

FOR SIGNATURE, HOME AND ELEMENT THERMOSTATS

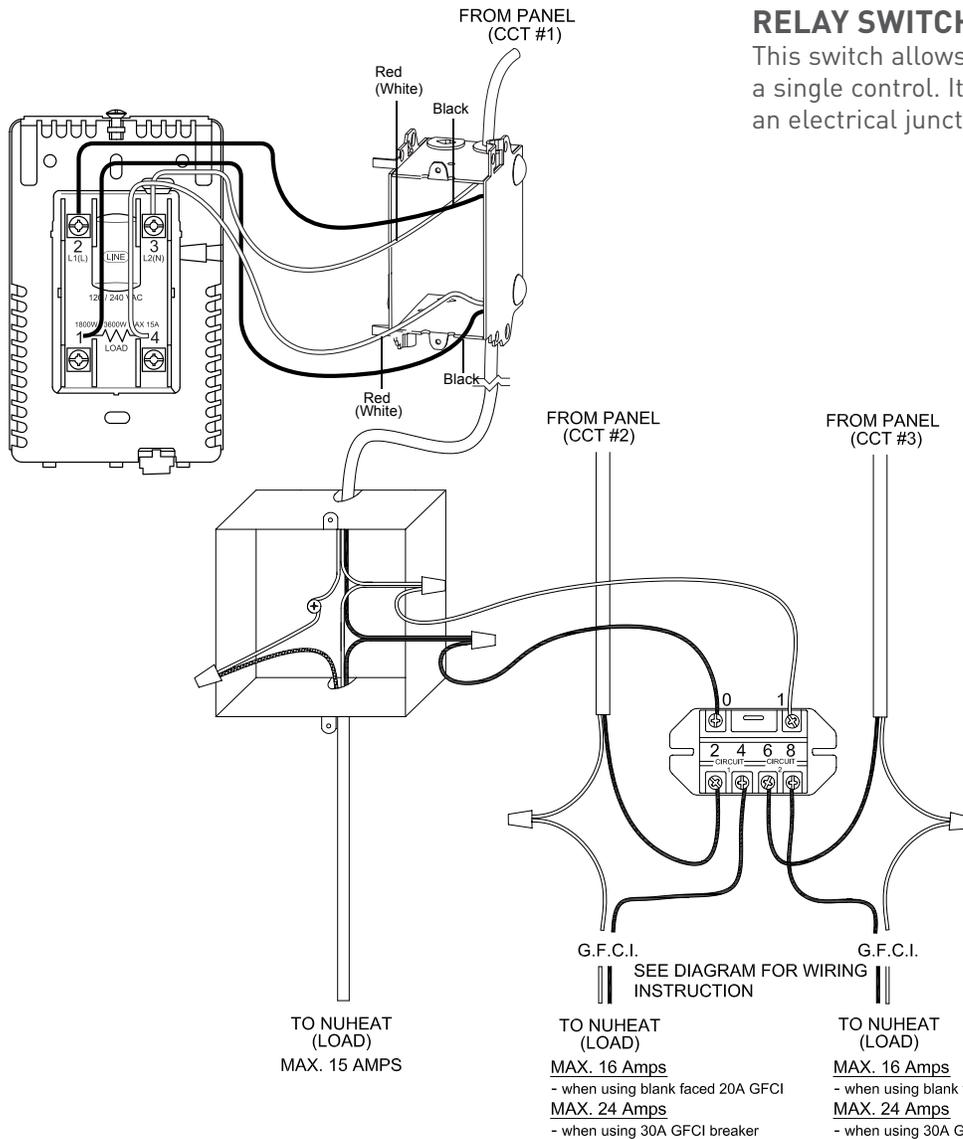

RELAY SWITCH OR CONTACTOR FOR 120V

This switch allows you to control multiple circuits with a single control. It may be conveniently located inside an electrical junction box.

NUHEAT FLOOR HEATING CONTROL WITH G.F.C.I.

See diagram for wiring instructions.

WIRING INSTRUCTIONS FOR RELAY (120V)

- 0 - Line 1 from control
 - 1 - Neutral wire from control
 - 2 - Line 1 feed from panel (CCT #2)
 - 6 - Line 2 feed from panel (CCT #3)
 - 4 - Line 1 (Black) to Nuheat
 - 8 - Line 2 (Black) to Nuheat
- Note: Do not connect neutral wires from different circuits together.

NORTH AMERICA

Tel: +1.800.778.9276

Fax: +1.604.529.4404

res.customercare@pentair.com

Pentair assumes no responsibility for field wiring. Please consult a certified electrician for further instruction if needed. Wiring must be in accordance with national and local electrical codes. Wiring methods may differ for each control, please consult manufacturer's instructions for actual specifications.

Pentair and Nuheat are owned by Pentair or its global affiliates. All other trademarks are the property of their respective owners. Pentair reserves the right to change specifications without prior notice.

© 1996-2017 Pentair.