


Wiring Diagram for Nuheat SIGNATURE, HOME & Element Thermostats

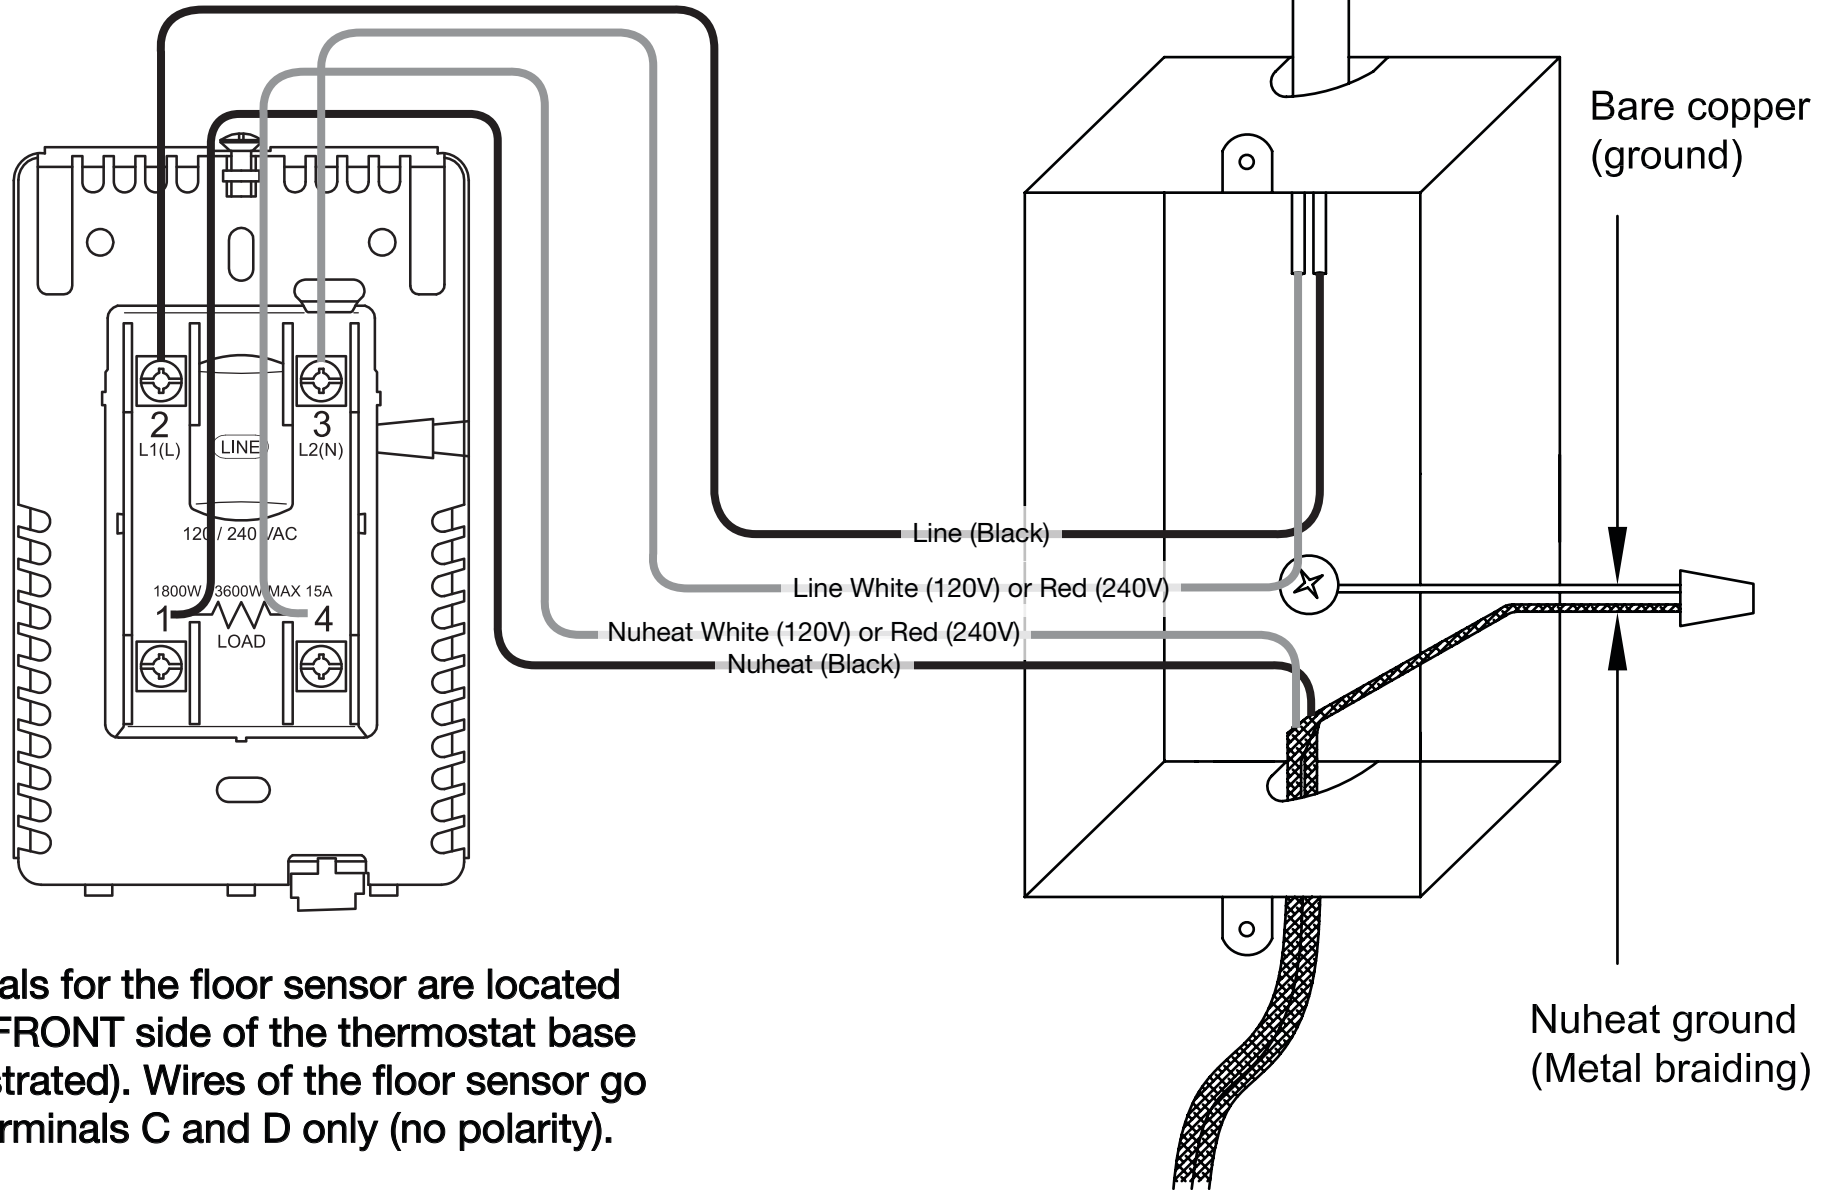

Terminals for the floor sensor are located on the FRONT side of the thermostat base (not illustrated). Wires of the floor sensor go into terminals C and D only (no polarity).

Nuheat mat(s)
15.0 Amp maximum per thermostat
(without use of relay switch)

NUHEAT INDUSTRIES LTD. ASSUMES NO RESPONSIBILITY FOR FIELD WIRING. PLEASE CONSULT A CERTIFIED ELECTRICIAN FOR FURTHER INSTRUCTION IF NEEDED. WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES. WIRING METHODS MAY DIFFER FOR EACH CONTROL. PLEASE CONSULT MANUFACTURER'S INSTRUCTIONS FOR ACTUAL SPECIFICATIONS.