


# Wiring Diagram for Nuheat Thermostats

**Nuheat**

For Conductor, Signature, Home & Element Thermostats

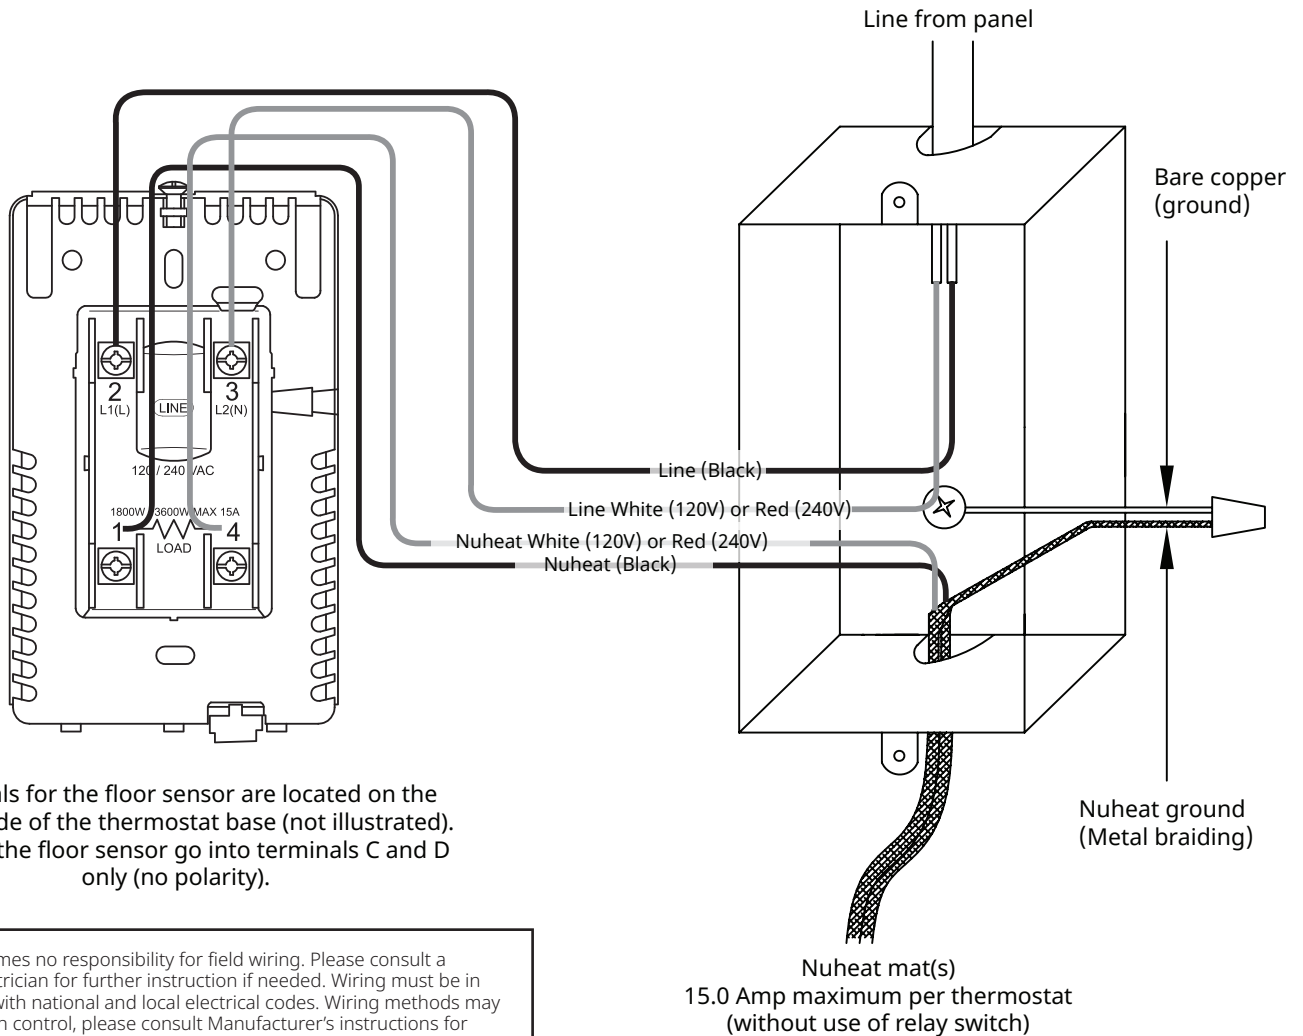

Terminals for the floor sensor are located on the FRONT side of the thermostat base (not illustrated). Wires of the floor sensor go into terminals C and D only (no polarity).

Nuheat assumes no responsibility for field wiring. Please consult a certified electrician for further instruction if needed. Wiring must be in accordance with national and local electrical codes. Wiring methods may differ for each control, please consult Manufacturer's instructions for actual specifications.

## North America

Tel +1.800.778.9276

Nuheat.CustomerCare@chemelex.com

**chemelex**  
excellence is everything

**Raychem Tracer Pyrotenax Nuheat**